List of storage features

1 Overhead console
2 Glove box
3 Door pockets
4 Console boxes
5 Cup holders

Glove box
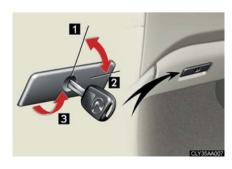
1 Unlock with the key
2 Lock with the key
3 Open (pull lever)

Glove box light

The glove box light turns on when the tail lights are turned on.

Power back door main switch

The power back door main switch is located in the glove box. (→P. 33)

 CAUTION

Caution while driving

Keep the glove box closed.
Injuries may result in the event of an accident or sudden braking.

Console boxes

Using the console box
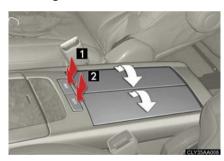
▶ Front

1 Open

2 Close
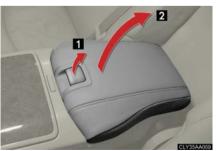
▶ Rear (if equipped)

1 Pull up the knob to release the lock.

2 Lift the armrest to open.

Adjusting the position of the console box (front)

1. Open the cup holder lid on the console box.
2. Adjust the position of the box while lifting the lock release lever.

⚠ CAUTION

Console box adjustment precaution

- Do not adjust the position of the console box while the vehicle is moving.
  This may cause the driver to mishandle the vehicle and may lead to an accident that results in death or serious injury.
- Be careful not to get hands or feet pinched between the front console box and the center panel or rear seat.
- Be careful not to allow the front console box to hit any passengers while adjusting its position.
- After adjusting the console box, make sure it is securely locked in position.

Removing the adapter tray

Pull up.

Console box light (front)

The console box light turn on when the tail lights are turned on.

CAUTION

- **Caution while driving**

  Keep the console box closed.
  Injuries may result in the event of an accident or sudden braking.

Overhead console

The overhead console is useful for temporarily storing sunglasses and similar small items.

 CAUTION

- **Items that should not be left in the overhead console**

  Do not leave glasses or lighters in the console.
  If the interior of the vehicle becomes hot, lighters may explode and glasses may warp or become cracked.

- **Caution while driving**

  Do not leave the overhead console open while driving.
  Items may fall out and cause injury.

- **Maximum storage weight**

  Do not place any object heavier than 0.22 lb. (100 g) in it.
  The console may be opened and cause injury.

Cup holders

▶ Front (type A)

To open, press in and release the front cup holder.

▶ Front (type B-1)

To open, press down and release the rear of the cup holder lid.

▶ Front (type B-2)

To open, press down and release the rear of the cup holder lid.

▶ Rear

To open, press down the button on the armrest.

■ **Cup holder light (front-type B)**

The cup holder light turn on when the tail lights are turned on.

■ **Removing the separate tray (front-type B-2)**

Pull up.

CAUTION

■ **Items unsuitable for the cup holder**

Do not place anything other than cups or aluminum cans in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury. If possible, cover hot drinks to prevent burns.

■ **When not in use**

Keep the cup holders closed.
Injuries may result in the event of an accident or sudden braking.

Door pockets

The door pocket can be opened and closed.

CAUTION

■ **Caution while driving**

Keep the door pockets closed.
Injuries may result in the event of an accident or sudden braking.